

LaLili



Owners Manual



GULFSTREAM PLASTICS LTD.
Cambridge, Ontario, Canada N1R 6T4
Phone (519) 622-0950
Toll Free 1-877-622-4853
Fax (519) 622-6926
Website: www.gulfstreamplastics.com

LaLili

*Manufacturers of Acrylic Baths
Whirlpools & Pedicure Foot Spas*

Thank you for purchasing the La Lili spa from Gulfstream Plastics Ltd.
Please carefully read instructions before installing La Lili spa.

By correctly following these instructions; your La Lili Spa, will give you
years of beauty and service.

Contents:

Section A.	Component Locations	1-2
Section B.	Installation Instructions	3
Section C.	Operation and use	4
Section D.	Safety instruction	5
Section E.	Cleaning and Maintenance	6-7
Section F.	Specifications	8
Section G.	Warranty	9

CAUTION:

Must be installed by a, licensed plumber and electrician
in accordance with local codes. Plumbing and
Electrical Installation instructions must be adhered to in
order for the warranty to be in effect and to insure the
utmost in safety. Chair and spa have a maximum
seating capacity of 350 pounds.



LaLili


Section A. La Lili Component Locations




LaLili

Section A. La Lili Component Locations


Bottom View

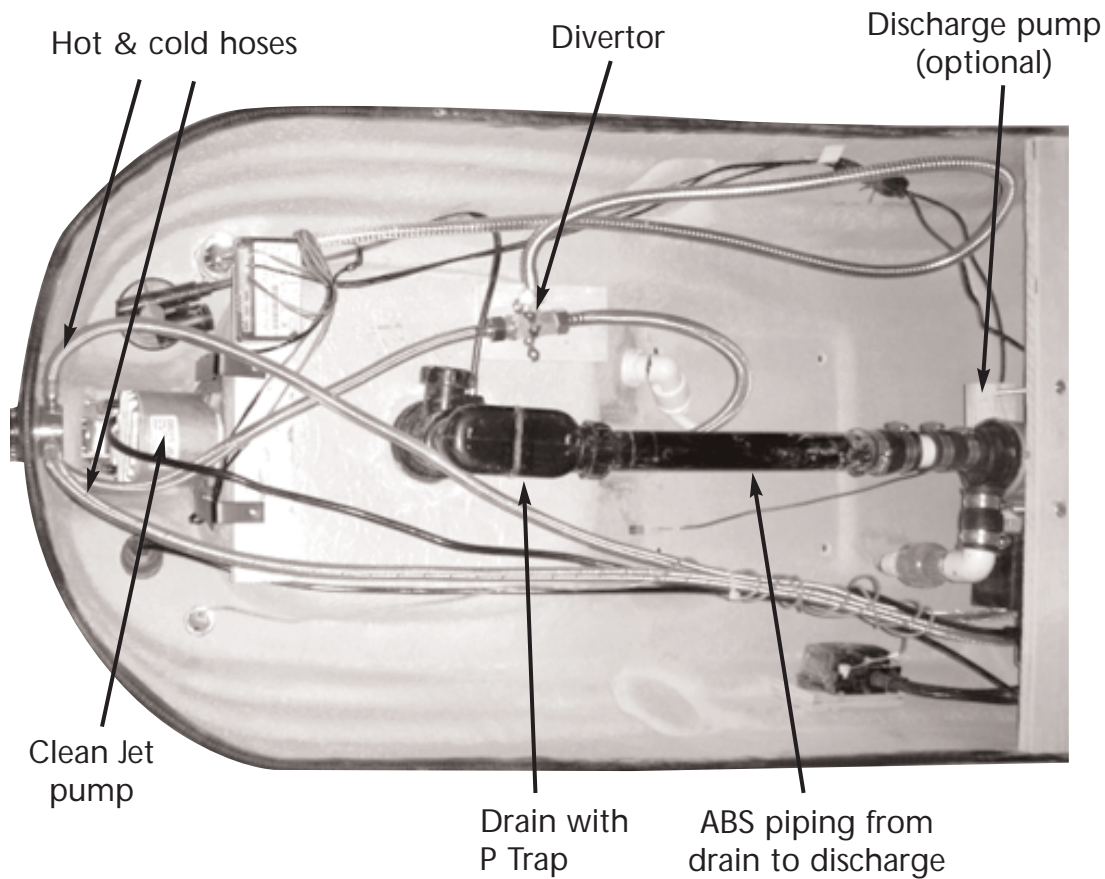

Top View

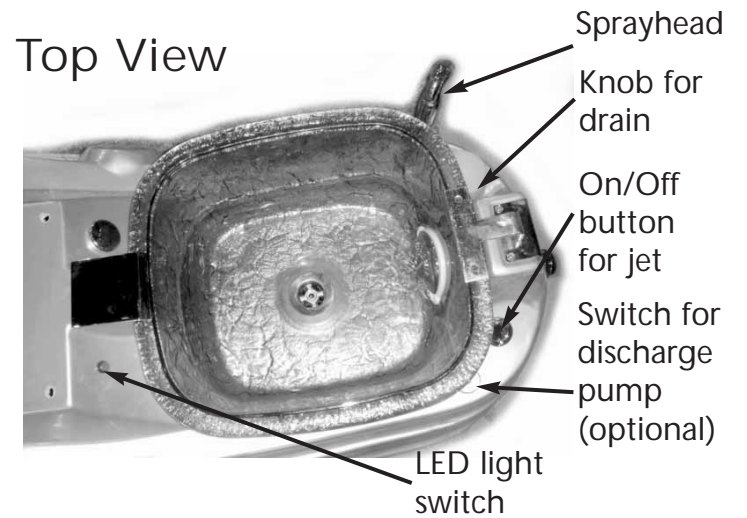

Back View

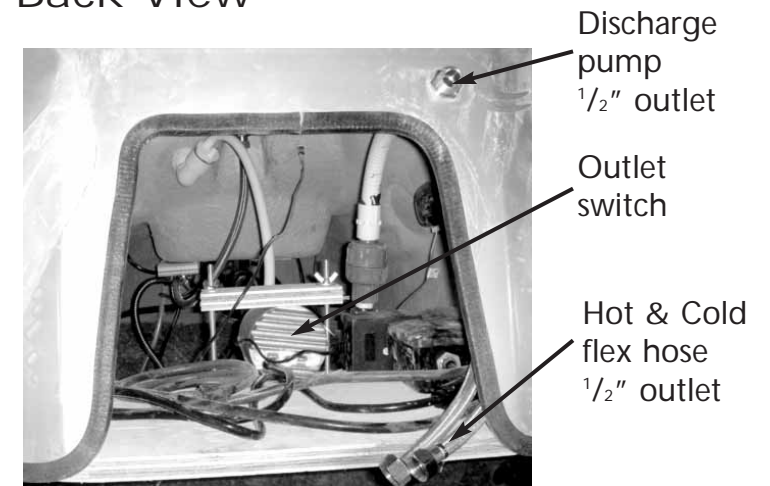

Section B. Installation Instructions

1. Discharge pump installation - The La Lili discharge pump may be connected to an existing sink drain or floor drain. It can also pump up to 20 ft high, but this will increase the length of the drain time. The drain connection is at the rear of the unit by a 1/2" fitting.

2. Gravity drain installation - The La Lili uses a standard gravity drain. A floor drain is the recommended installation. Connection is via a 1/2" pipe. A P-Trap is supplied.

3. Water Supply Connections – The La Lili hot and cold connections are located at the rear of the unit. 1/2" Fittings.

4. Electrical installation - Have a qualified licensed electrician to install the wiring according to local codes. The CleanJets are 1/5 hp, 120V, 15 AMP 60OHZ. A GFI protected circuit must be used to supply power to the unit. The roller back massage chair uses a 115V supply.

5. Secure the base - The La Lili base should be anchored securely to the floor. The base may be anchored through the opening in the back of the base wherever access is convenient for the installer.

WARNING:

FAILURE TO ANCHOR THE BASE MAY RESULT IN PERSONAL INJURY OR DAMAGE TO THE UNIT. DAMAGE AS A RESULT WILL VOID THE WARRANTY.

La Lili

Section C. Operation and Use

1. Fill bowl – Your La Lili is provided with a single hot and cold mixing valve located on the front of your spa (far left). This is a pressure balance valve that requires you to lift the handle to start the water flow and to adjust to the temperature that is desired. The clean jet motor must be completely submerged in water. **CAUTION: DO NOT USE FOAMING, SUDSING OR MINERAL OIL BASED ADDITIVES IN THE WATER.**

2. To start – Press the button that is situated next to the water fill lever. This will start your Clean Jet motor. You may stop the whirlpool function at any time by pressing the button again.

3. Adjustable air control - The air control button is situated on the left hand side of the spa base, just under the chair. You can control the supply of air to the clean jet motor by turning this chrome button in a clockwise direction.

4. Hand Shower – The La Lili is equipped with a hand held sprayer. To activate the hand shower, pull the hand shower from the receptacle and

depress the thumb control on the sprayer handle. This will turn on the water. When you release pressure on the thumb control this will turn the water off.

5. Adjustable footrest - The La Lili utilizes a comfortable 3-position footrest system in which the footrest can be adjusted by pulling out the pin located at the centre of the La Lili base and placing the pin in one of the three holes situated on the footrest stand. You can also slide the footrest forward by pulling out the pin located at the side of the actual footrest. This will cause the footrest pad to slide forward.

6. To drain whirlpool tub – La Lili. The La Lili is equipped with a built in optional discharge pump. Open the drain plug by turning the control knob which is situated at the far right of the spa base. The discharge pump will turn on automatically and the water will drain.

7. 9500 Shiatsu Roller back massage chair - Your La Lili is equipped with a state-of-the-art massage system. The massage system is easy to use; the remote has a one touch power that starts directly in the auto function mode, or you can select your own massage. You can also adjust the front to rear position of the chair and the reclining back. By using the remote your client can adjust the back to the most comfortable position.

Section D. Safety Instructions

CAUTION: BASIC PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING

1. Read and follow all instructions
2. DANGER. To reduce the risk of injury, do not permit children to use this unit unless they are supervised at all times.
3. Use this unit only for its intended use as described in this manual. Do not use attachments that are not recommended by the manufacturer.
4. Never drop or insert any object into any opening.
5. Do not block jets during whirlpool operation.
6. The unit must be connected to an electrical supply circuit that is protected by a ground fault circuit interrupter.
7. SAVE THESE INSTRUCTIONS.

Section E. Cleaning & Maintenance

Gulfstream Plastics Ltd highly recommends the following cleaning regimen. You should always contact your local governing agency for their specific cleaning and disinfecting requirements and regulations for pedicure spas. For your clients safety, always use the regulations as a minimum standard for cleaning and disinfecting. Combining your states standards with the regimen listed below will provide your clients with a safe and healthy pedicure spa environment experience.

1. Routine maintenance. Powdered cleansers or abrasives are NOT RECOMMENDED. A clean towel or sponge, are all that are usually needed. A soft bristled brush may be used when excessive residue is present. Use a mild soap and water solution to clean the upholstery, but do not over wet. Wipe dry with a clean towel. No internal maintenance of the spa components is necessary. Remove clean jet caps and spray with disinfectant after each use. For extra protection, our recommendation is that the system be flushed daily or weekly depending on use. To flush the clean jet system fill spa with hot water to just above the jets. Add disinfectant. Run whirlpool for 15 minutes, drain and then wipe dry with clean soft cloth.

NOTE: Cleaning or sanitizing is NOT disinfecting. According to the Centers for Disease Control and Prevention (CDC), and the US Environmental Protection Agency (EPA), disinfecting occurs only when there is a reduction of pathogenic microbes at 99.999%. Sanitizing is only a reduction of 99.9%. Cleaning of whirlpool pedicure spas requires surfactants and chelating detergents that are low-foaming and have the ability to remove body oils, organic oil additives, mineral oil, skin cells, nail clippings etc that can accumulate both in the basin and the jets which may become a fertile area for micro organisms to grow.

The use of oil based products can build up in the whirlpool system causing clogging in the jets. Adherence to the above cleaning will minimize build up. Gulfstream Plastics Ltd does not recommend the use of mineral oil based products.

TESTING/FLUSHING FOOT SPA

After foot spa has been installed, fill tub with water just above the jets. Carefully check for leaks at drain and overflow. After checking underside for leaks turn on system by pushing whirlpool button and watch for leaks as water circulates. Let tub run full cycle. Open drain plug for water discharge.

LaLili

Section E. Cleaning & Maintenance



Remove screen by turning counter-clockwise.



Clean intake area using a soft bristled brush or cloth and low foam soap to remove any visible residue. Rinse with sprayhead - Cold water



Clean back of screen Jet with same soft brush or cloth. Rinse with cold water



Replace screen by turning clockwise

LaLili

Section F. Specifications



Section G. Warranty - Service

Gulfstream warrants to the original purchaser that the new pedicure spa will be free from defect during the Standard Warranty Period (listed below). The shipping date and the uniquely-coded Serial Number on the back of each spa chair will justify the start of the warranty period for the product. The warranty is null and void if the pedicure spa is taken from its initial place of installation, or it is not installed in accordance with federal, state or local codes and ordinances. Also, this warranty does not apply if the pedicure spa has been subject to misapplication, improper installation or maintenance, negligence, improper cleaning or other circumstances beyond Gulfstream's control.

Warranty

1. Limited Three Year warranty on Spa Shell.
2. Limited One Year warranty on the Whirlpool Pump.
3. Limited One Year warranty on the Clean Jet.
4. Limited One Year warranty on the Glass Bowl.
5. Limited One Year Parts-Only warranty which covers the Hydraulic System, Discharge Pump, Massage System and All Electrical Components.
6. Gulfstream will pay shipping charges on all replacement parts during the first 90 Days of the stated Warranty Period. After 90 days the consumer is responsible for all labour and shipping costs incurred.
7. During the first 90 days, any part or component of the Product is found by the Company to be defective, the Company will repair, without charge for labour or parts.

Exclusions

1. Damage to pump parts and/or motor parts due to obstruction in plumbing lines etc.
2. Staining, fading or discoloration of plastic surfaces due to exposure and/or the use of harmful cleaning agents or chemicals.
3. Staining, fading or discoloration caused by improper or poor water additives not related to the maintenance of proper water are not covered by this warranty.
4. Staining, fading or discoloration of the seat, armrests or footrests.
5. Freight damage, misuse, neglect, accident, natural disaster and abuse.
6. Unauthorized repairs.

Service

1. The Dealer shall forward all warranty-related matters to our Customer Service Department.
2. Serial Numbers and Original Invoice must accompany all warranty claims.
3. Customers are responsible for shipping defective parts back to Gulfstream. These parts must be packaged correctly in order to protect against any further damage.
4. All parts are to be shipped by UPS Ground Service - average 2-5 days.
5. All defective parts must be shipped back to Gulfstream within 30 days of receiving the new replacement parts or warranty will be void.
6. Any warranty claim that cannot be determined over the phone, the customer must send photos and original invoice directly to Gulfstream before any repairs can be performed.
7. Any service performed on the product without Gulfstream's authorisation will also void the Warranty.
8. Each service call from the customer will be assigned a Claim Number. The Claim Number will stay open until the problem is resolved.

No dealer or other person has any authority to bind Gulfstream Plastics Ltd. to changes or additions to this warranty or its products. Accordingly, Gulfstream Plastics Ltd. is not responsible for such warranties or representations.



*Manufacturers of Acrylic Baths
Whirlpools & Pedicure Foot Spas*

GULFSTREAM PLASTICS LTD.
Cambridge, Ontario, Canada N1R 6T4
Phone (519) 622-0950
Toll Free 1-877-622-4853
Fax (519) 622-6926
Website: www.gulfstreamplastics.com